 


<u>Instructions For Installing</u> Universal Adjustable Windsield Wiper Arm

Note: Before Installing Arm, Start Engine, Turn Wiper On, Then Off, To Bring The Shaft Into Parking Position.



BLADE ATTACHMENT

Hook wiper blade to arm. If replacing formed arm, loosen the small screw on the arm clip and adjust to position desired; then tighten screw securely. (Figure 6)

