



H4, 9004, 9007 Bi-xenon Installation Diagram

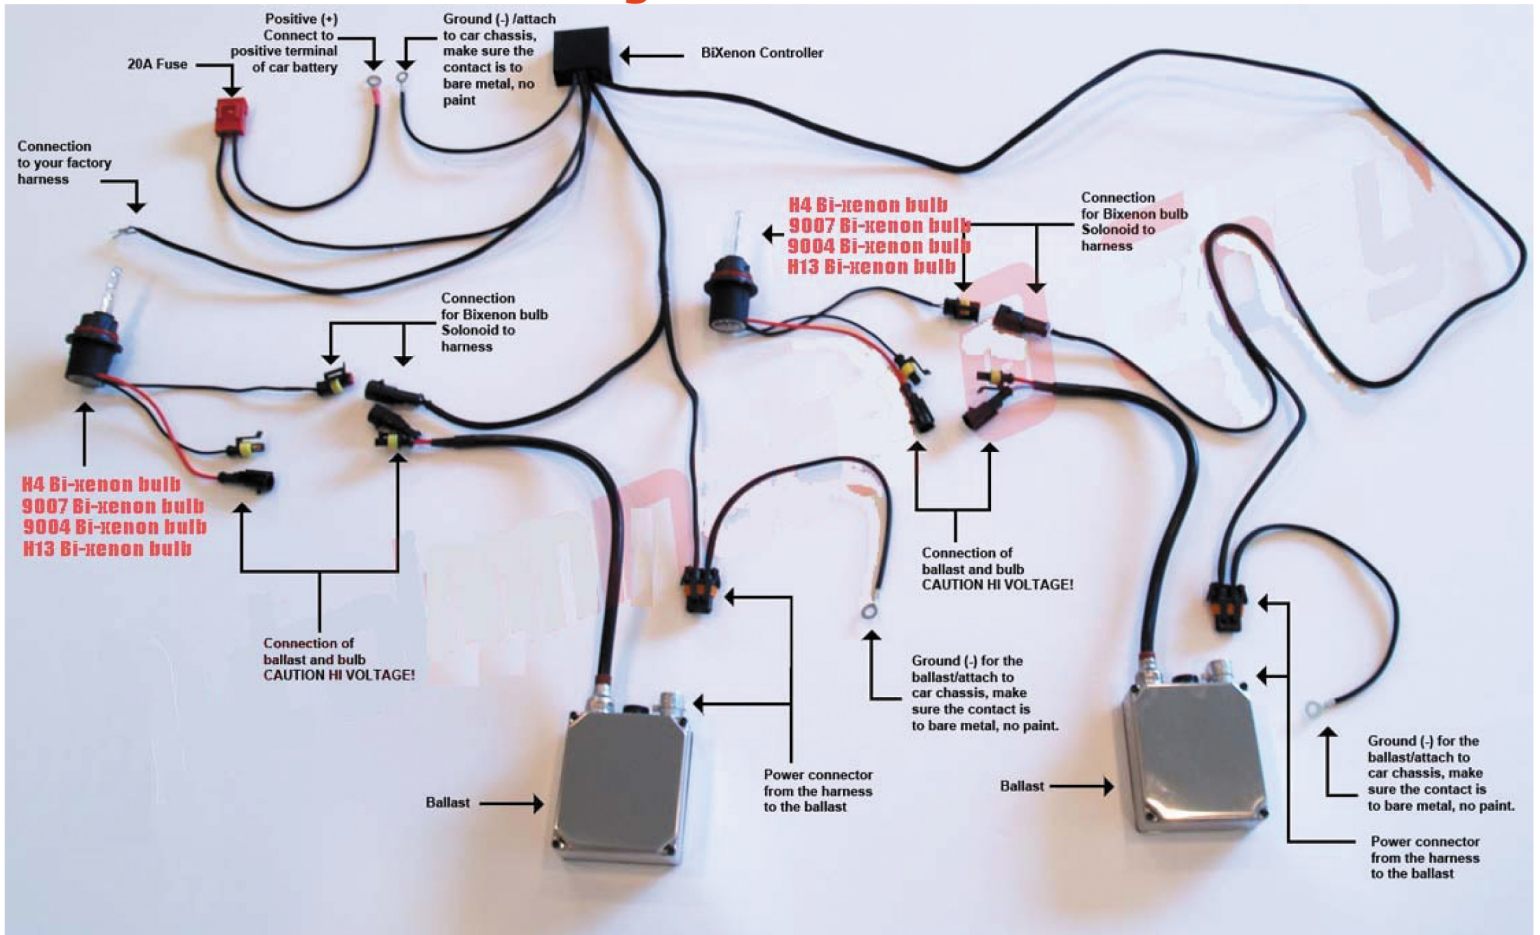

note: above pic is using the integrated ballast (thick ballast), if you have the slim ballast the diagram will be the same. just replace the regular ballast to the slim ballast.

H13/9008 Bi-xenon Installation Diagram

9004, 9007, H13 Bi-xenon HID Kit Install Diagram

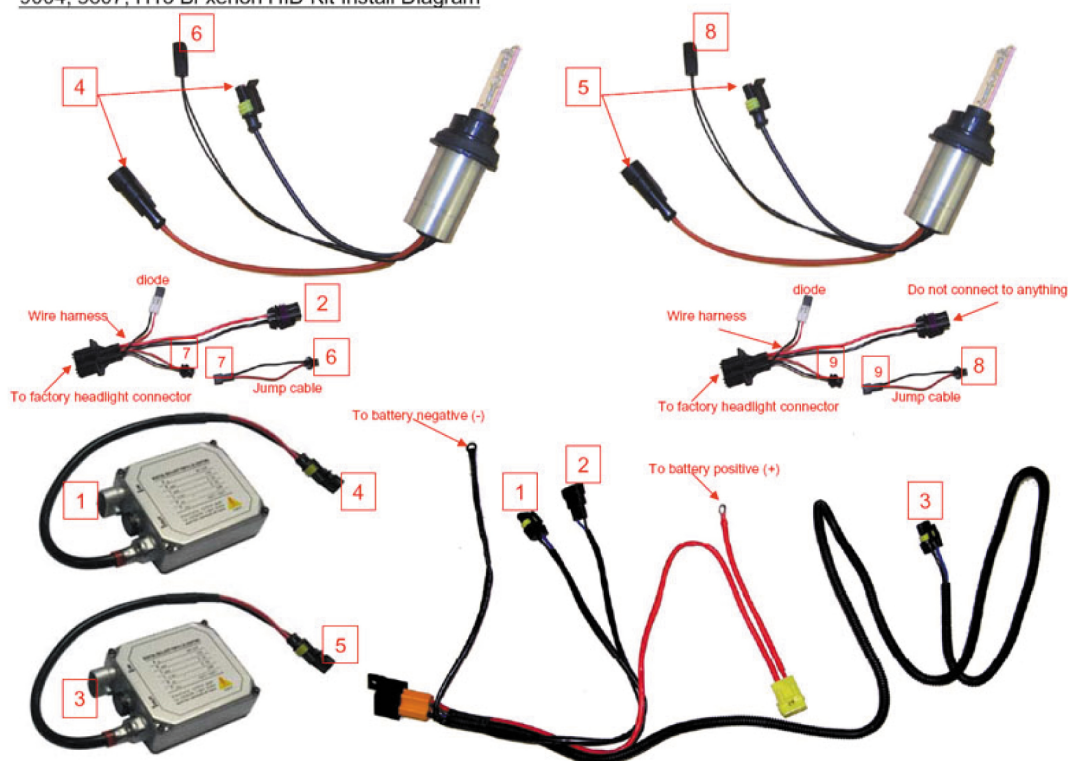

Installation Notes :

1. Please connect the connectors with matching numbers in the diagram.


Example : 1 connects to 1

2. If everything is connected properly, and the lights are not functioning (example: high beam low beam are reversed, or only high or low beam works), please try the following :

a. Reverse the diode : pull out the diode and reverse it, and insert back in. Please do it for both sides.

b. Disconnect 7 and 9 at jump cable. reconnect 6 (from the bulb) to 7 (from wire harness), reconnect 8 (from the bulb) to 9 (from wire harness).

Relay Installation

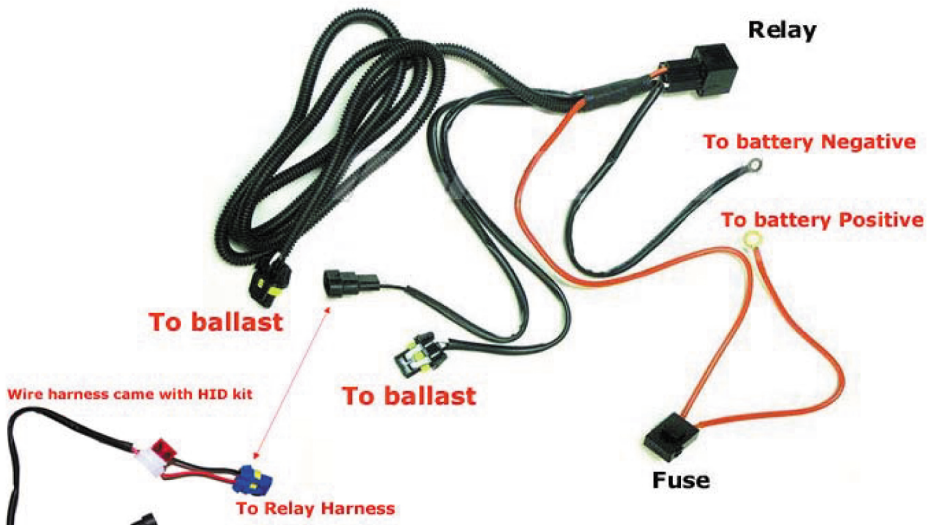

**To OEM Headlight power source, YOU WILL ONLY NEED TO CONNECT TO ONE SIDE.
(This connector could be H1,H3,H4,H7,H10,H11,H13,9004,9005,9006,9007)**