

② FOR COLOR CODE INSTRUCTION
SEE SECTION O SHEET 1, 14


① TIGHTEN TO 9 TO 11 FT. LBS. TORQUE

MODELS
3000

SHOCK ABSORBER INSTRUCTION

Part

| | | | | |
|---------------------------------|---------------------|------------------|-------|-----|
| NAME CHASSIS INSTRUCTION MANUAL | | | | |
| REF. | DRAWN W. P. | CHECKED E. W. | SECT. | SHE |
| DATE 4-29-53 | PART No. 3707900 | | 3 | 3.0 |

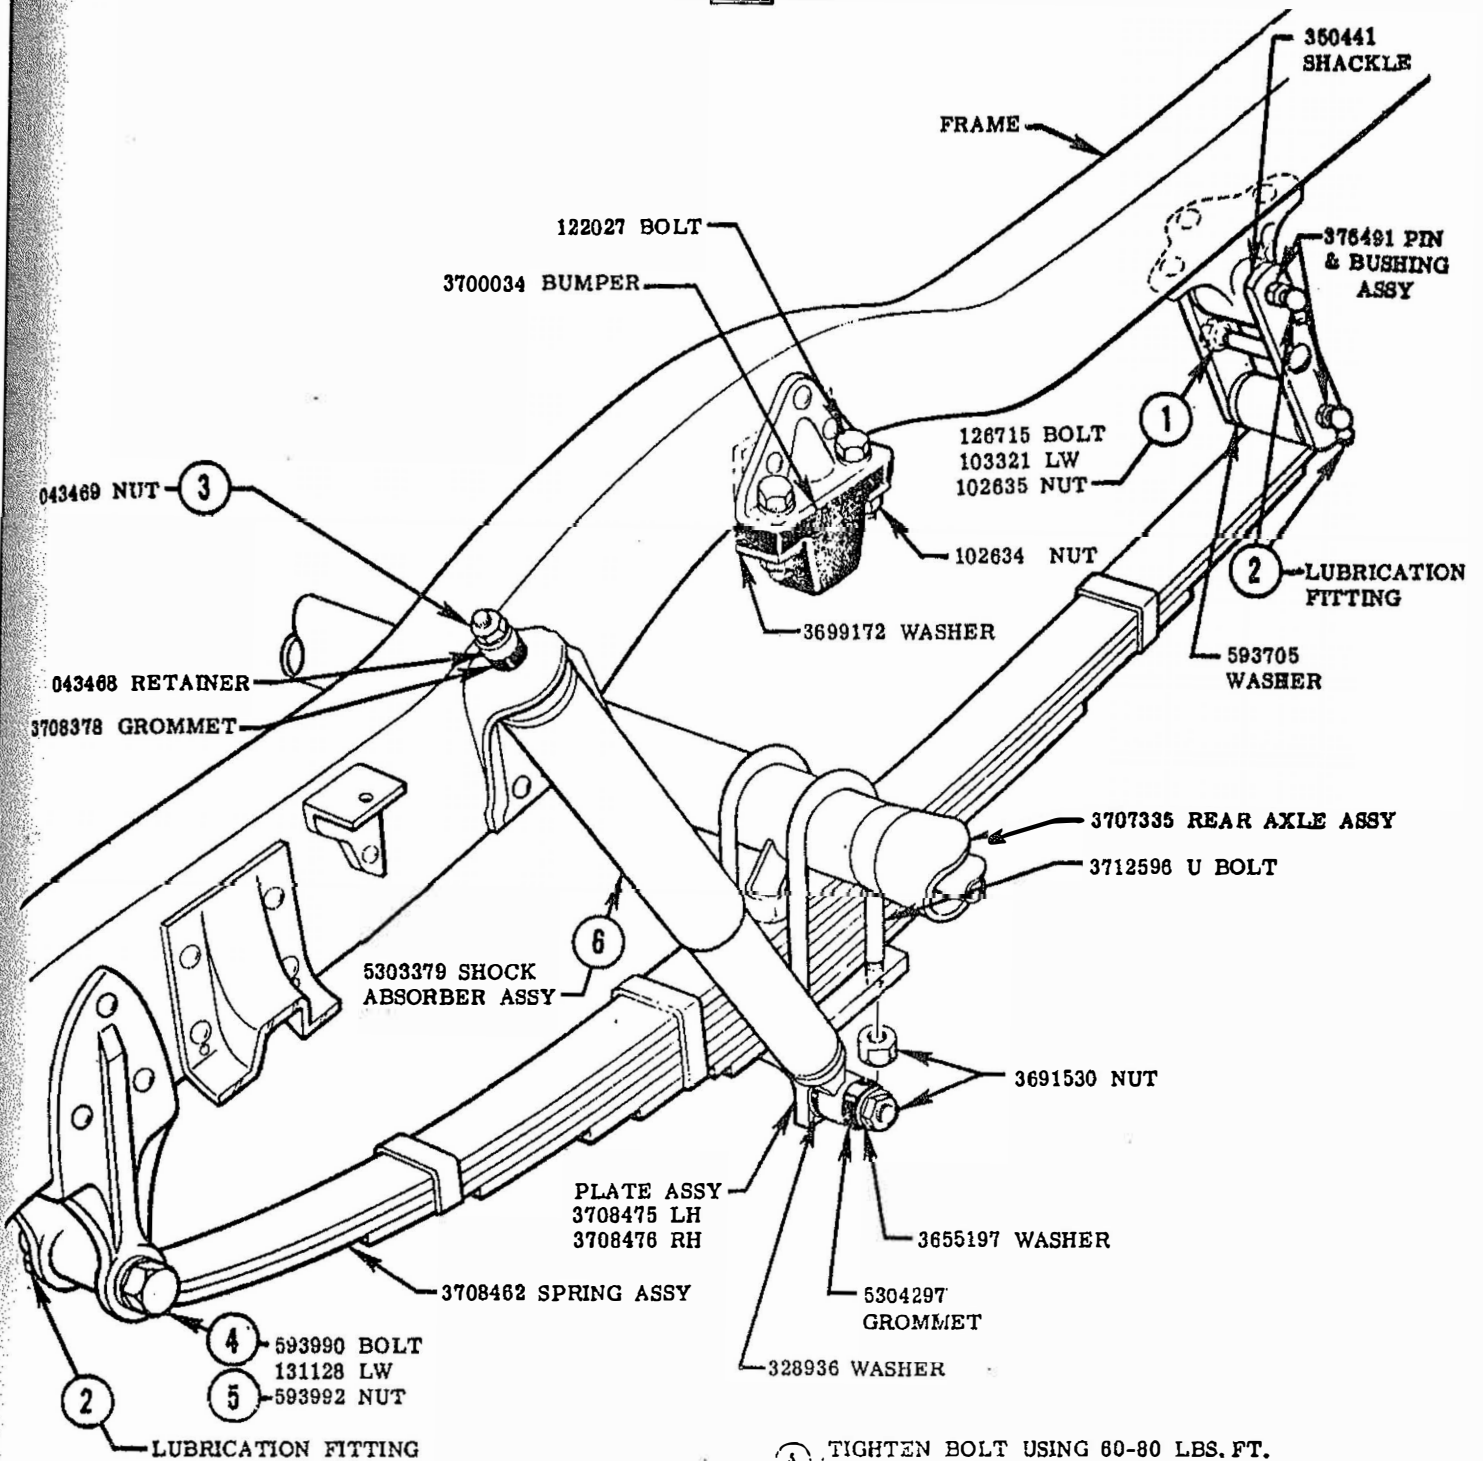

- ① TIGHTEN NUT USING 8-10 FT. LBS. TORQUE LOAD
- ② SEE LUBRICATION INSTRUCTION
- ③ 9-11 FT. LBS. TORQUE

- ④ TIGHTEN BOLT USING 60-80 LBS. FT. TORQUE BEFORE TIGHTENING NUT
- ⑤ TIGHTEN NUT USING 60-80 LBS. FT. TORQUE AFTER TIGHTENING BOLT
- ⑥ FOR COLOR CODE INSTRUCTION SEE SECTION O SHEET 1, 14 11

Reas

MODELS
3100

REAR END SUSPENSION INSTRUCTION

| | | | | |
|---------------------------------|---------------------|-----------------|-------|-------|
| NAME CHASSIS INSTRUCTION MANUAL | | | | |
| REF | DRAWN W.P. | CHECKED E.W. | SECT. | SHEET |
| DATE 5-28-53 | PART No. 3707900 | | 4 | 1.00 |