



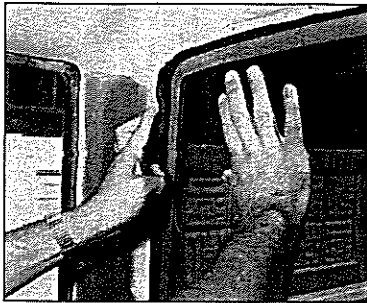

Pickup Truck Sliding Rear Window Installation Instructions


The installation of our Sliders is a simple procedure that requires only a slotted head screwdriver, fifteen feet of 1/8" nylon cord, a lubrication spray such as WD-40, and about 15 minutes time. Although glass breakage is unlikely, safety glasses should be worn. Read all the instructions before beginning installation.

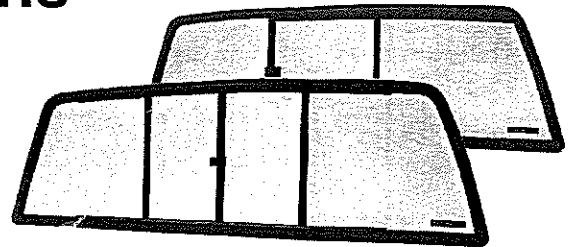

Step 1

Removing Original Glass



If the original gasket has a decorative insert, do not remove it. Use masking tape to seal the insert in the gasket before removing the original glass and gasket. While your helper supports the outside of the glass, peel inside leg of gasket into the window opening while applying gentle pressure outward. Glass and gasket will release from truck opening.

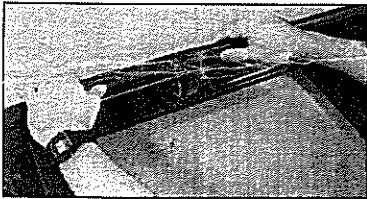

Step 2

Gasketing the Sliding Rear Window


Determine whether the vehicle is equipped with the correct gasket. Some trucks come with a factory-installed slider that uses a style of rubber gasket that is not suitable for CRL Sliders because the gasket channel is too wide to properly hold the Slider. If this is the case, the gasket must be replaced by a new gasket for the factory backglass.

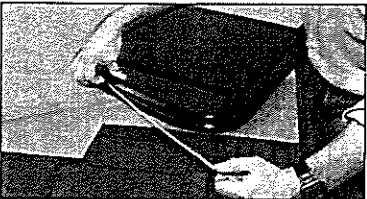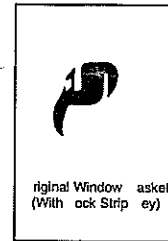

Step 3

Cord Placement


Place nylon cord completely around the gasket in the outside channel, overlapping in center at bottom. Spray channel and nylon cord with lubricant.

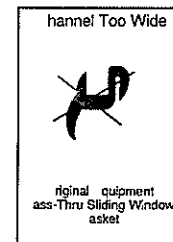

Step 4

Seating Window

Have the helper hold window against outside of truck opening with latch to inside of truck. Pull each end of the cord straight into opening gently. Inside leg of gasket will reseat itself inside opening. Proceed carefully around opening, alternating sides to finish across top at center. Use screwdriver to reseat areas only where necessary.

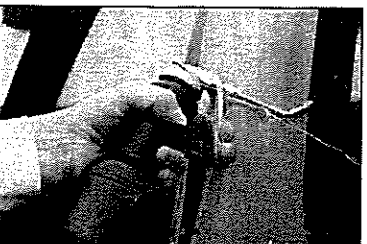

Step 5

Test

Spray with gentle hose pressure. If a leak is detected, seal with a butyl type sealer in gasket channels.

V 3043 R V.05/16