


2401

2 1/2" Front lowering kit
40 to 48 Chevy car

USE WITH:

Shorter frame rubber suspension snubbers.

- (1) Raise front of car, support frame properly
- (2) Work with one side at a time.
- (3) Compress coil spring.
- (4) Remove 4 rivets that secure coil spring lower pocket to lower control arm. Ream these holes to accept 3/8" bolts.

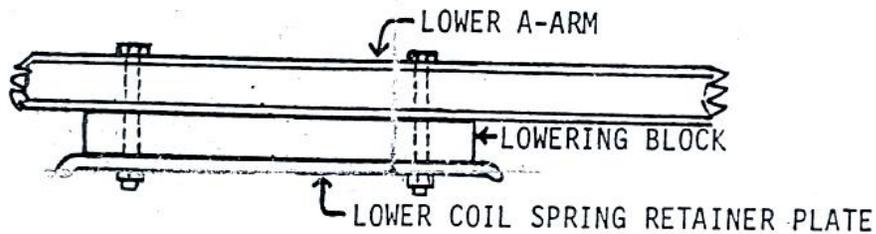

- (5) BOLT through lower control arm, blocks, and spring pocket. (SHORT BLOCK TO REAR)

****TIGHTEN ALL BOLTS PROPERLY****

NOTES: Coil springs & shocks stay original length for a good ride but suspension travel is reduced. To regain better travel clearance trim 1/2 length from rubber snubbers or replace with shorter snubbers.